

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Close supervision is necessary when any appliance is used near children.
3. Do not immerse cord, plug, or any part of the appliance in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself, if the power cord or the plug is broken or damaged, do not repair or change yourself, please send the appliance to qualified service centre for repair or service.
6. When operating the oven, keep at least four inches (ten centimeters) of space on all sides of the oven to allow for adequate air circulation.
7. To disconnect, turn the control to OFF, before removing the plug.
8. Unplug from outlet when not in use and before cleaning. Always hold the plug, but never pull the cord.
9. Allow the appliance to cool before putting on or taking off parts, and before cleaning
10. Extreme caution must be used when moving an appliance containing hot oil or food.
11. Do not cover any part of the oven with metal or cloth, it may cause overheating of the oven.
12. Do not place any item on the oven or cover the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Never leave the appliance unattended in working.
15. Oversized foods or metal utensils can not put into the appliance as they may create a fire or risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of anything other than qualified metal or qualified ceramics.
17. Do not place any of the following materials in the oven: plastic, paper, or anything similar.
18. Do not use any accessories other than manufacturer recommended accessories in this oven.
19. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
20. Do not use this appliance for any use other than its intended use.
21. This appliance is for HOUSEHOLD USE only.
22. The glass door is heavy, please hold the handle until the door is completely open, do not let the door fall itself.
23. Children should be supervised to ensure that they do not play with the appliance
24. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. If the supply cord damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## ACCESSORIES:

- \* BAKE PAN
- \* BAKE RACK
- \* PAN HANDLE

1


## LIST OF COMPONENTS

1. Temperature knob
2. Heat selector knob
3. Lamp (inside)
4. Timer & Lamp knob
5. Power light
6. Glass door
7. Bake pan
8. Bake rack
9. Pan handle




## SELECTOR KNOB

1. OFF
2. Top heating
3. Bottom heating
4. Top & bottom heating

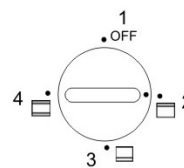

## TIMER KNOB

 When timer is turned on, the inside lamp is ON.  
When timer is turned off, the inside lamp is OFF.



## BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

## OVEN USE

- Turn the temperature knob clockwise to the desired temperature.
- Turn the Heat selector knob to the desired function.
- Turn the timer dial clockwise to the desired cooking time.
- The inside lamp and the power light will light up when the timer is turned on, and will go out when the timer is turned to OFF.

2

- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF to turn off the oven.
- In the first use of this oven, there might be some light smoke coming out from the oven, this is normal. After 5-10 minutes the smoke will disappear.
- In order to get better cooking performance, it is recommended to pre-heat the oven about 10-15 minutes.

## GRILL COOKING

- Leave the door at the open point.
- Turn the selector to GRILL setting (top heating).
- Turn the temperature knob to 250°C.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn back the timer to OFF to turn off the oven.

## AFTER USE

- Turn back the timer to OFF.
- Turn the selector to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

## MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.

3

# MILUX®

## 25L ELECTRIC OVEN TOASTER

### WITH INSIDE LAMP

### INSTRUCTION MANUAL



**Model No. MOT-25**  
**240V~ 50Hz 1500W**