

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Close supervision is necessary when any appliance is used near children.
3. Do not immerse cord, plug, or any part of the appliance in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself, if the power cord or the plug is broken or damaged, do not repair or change yourself, please send the appliance to qualified service centre for repair or service.
6. When operating the oven, keep at least four inches (ten centimeters) of space on all sides of the oven to allow for adequate air circulation.
7. To disconnect, turn the control to OFF, before removing the plug.
8. Unplug from outlet when not in use and before cleaning. Always hold the plug, but never pull the cord.
9. Allow the appliance to cool before putting on or taking off parts, and before cleaning
10. Extreme caution must be used when moving an appliance containing hot oil or food.
11. Do not cover any part of the oven with metal or cloth, it may cause overheating of the oven.
12. Do not place any item on the oven or cover the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Never leave the appliance unattended in working.
15. Oversized foods or metal utensils can not put into the appliance as they may create a fire or risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of anything other than qualified metal or qualified ceramics.
17. Do not place any of the following materials in the oven: plastic, paper, or anything similar.
18. Do not use any accessories other than manufacturer recommended accessories in this oven.
19. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
20. Do not use this appliance for any use other than its intended use.
21. This appliance is for HOUSEHOLD USE only.
22. The glass door is heavy, please hold the handle until the door is completely open, do not let the door fall itself.
23. Children should be supervised to ensure that they do not play with the appliance
24. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. If the supply cord damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

 
## ACCESSORIES:

- \* BAKE PAN x 2 PIECES
- \* BAKE RACK x 1 PIECE
- \* PAN HANDLE x 1 PIECE
- \* ROTISSERIE SET x 1 SET

1


## LIST OF COMPONENTS

1. Temperature knob
2. Rotisserie & Convection selector knob
3. Heat selector knob
4. Timer knob
5. Power indicator
6. Convection (Inside)
7. Lamp (Inside)
8. Glass door
9. Bake pan
10. Bake rack
11. Pan handle
12. Rotisserie handle
13. Spit support
14. Rotisserie spit
15. Skewer
16. Thumbscrew
17. Drive socket

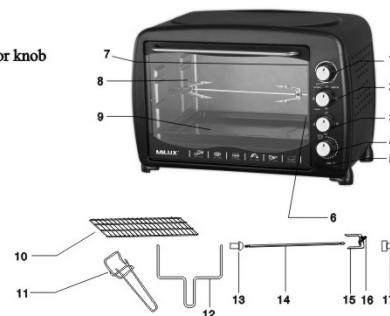


## ROTISSERIE & CONVECTION KNOB

 1. OFF
2. Rotisserie
3. Convection
4. Rotisserie & Convection

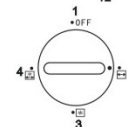


## HEAT SELECTOR KNOB

 1. OFF
2. Top heating
3. Bottom heating
4. Top & Bottom heating

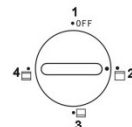

## TIMER KNOB (LAMP)

 When timer is turned on, the lamp will be turned on.  
When timer is turned off, the lamp will be turned off.



## BEFORE USING:

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

## OPERATING INSTRUCTIONS:

- Turn the temperature knob clockwise to the desired temperature.
- Turn the Rotisserie & Convection knob to the desired function.
- Turn the Heat selector knob to the desired function.
- Turn the timer knob clockwise to the desired cooking time.
- The power light will light up after timer is turned on, and will go off when the timer is off.
- When the cooking time is over, the timer will auto turn off and the bell will ring.
- If the cooking is finished before the set cooking time, please turn the timer to the OFF position.
- Some light smoke may come out from the oven during the first time usage, this is normal.

2

They will disappear after 5-10 minutes.

- In order to get better cooking performance, it is recommended to pre-heat the oven about 10-15 minutes.

## ROTISSERIE USE

1. Put one skewer through the pointed end of the spit, making sure the points of skewer face towards the spit's pointed end. Slide the skewer towards the square end of the spit.
2. Insert the rotisserie spit directly through the center of the food which you want to roast.
3. Put the other skewer through the pointed end of the spit, making sure the points of skewer face the spit's square end.
4. Put the two skewers into the food, then secure both skewers with the thumbscrews.
5. Make sure the food is centered on the rotisserie spit.
6. Insert the pointed end of the spit into the drive socket, make sure the square end of the spit rests on the spit support.
7. Plug the oven.
8. Set the temperature to 250°C.
9. Turn the timer to the time which you require, the power indicator will light up. Normally it takes 30 minutes to roast a 2.5Kg(5.5Pd) weight chicken.
10. Set the selector to Rotisserie or Rotisserie & Convection setting, the rotisserie starts rotating.
11. When the cooking time is over, the timer will auto turn off and the bell will ring.  
If the cooking is finished before the set cooking time, please turn the timer to the OFF position.
12. After the oven is cooled, place the hooks of the rotisserie handle under the grooves on both sides of the spit. Lift the right side of the spit first, move towards right side a little bit, so that the left side of the spit goes out of the drive socket. Then carefully move out the roasted food from the oven.
13. Take the food off the rotisserie spit.

## GRILL COOKING

- Leave the door at the open point.
- Turn the selector to GRILL setting (top heating), and Convection is recommended.
- Turn the temperature knob to 250°C.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn the timer to the OFF position.

## AFTER USE

- Turn the Rotisserie & Convection knob to the OFF position.
- Turn the Heat Selector knob to the OFF position.
- Turn the timer to the OFF position.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

## MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.

3

# MILUX®

## 45L ELECTRIC OVEN TOASTER WITH ROTISSERIE & CONVECTION & LAMP INSTRUCTION MANUAL



Model No. MOT-45  
220-240V~ 50/60Hz 2000W