




**MILUX SALES & SERVICE SDN. BHD.**  
(302263-X)

No. 31, Lorong Jala 14/KS10,  
Off Jalan Telok Gong,  
42000 Port Klang, Selangor, Malaysia.

Tel: 03-3134 1254 Fax: 03-3134 1193  
Toll Free: 1800-88-MILUX (64589)  
E-mail: [customercare@milux.com.my](mailto:customercare@milux.com.my)  
Website: [www.milux.com.my](http://www.milux.com.my)



## Instruction Manual HAIR DRYER MHD-5901

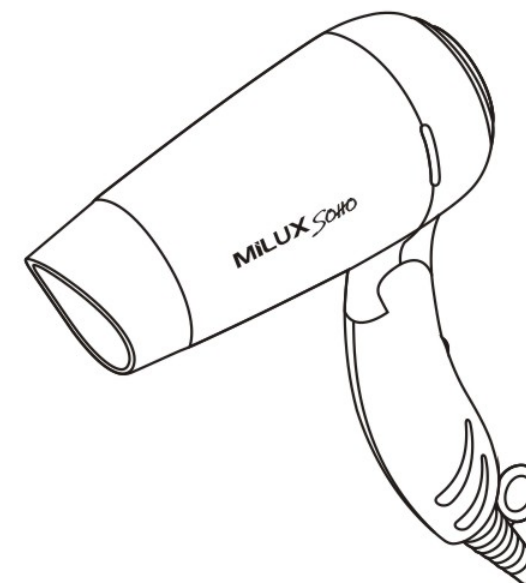

--	--

## GENERAL SAFETY PRECAUTIONS

- Read this instruction manual carefully before using the appliance for the first time. Keep this user manual for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not immerse cord, plug in water or other liquids.
- Do not operate appliance with a damaged power cord/plug or after the appliance malfunctions, or has been damaged in any manner. Return the appliance for examination, adjustments, or repair.

## Specifications

Model	MHD-5901
Rated Voltage	220-240V~
Rated Wattage	1000-1200W
Frequency	50Hz

## OPERATING INSTRUCTIONS

- 1) The dryer must be connected to a power supply that matches the rating label of the dryer.
- 2) To operate, kindly push the button to either in position 1 or position 2.
- 3) Position 1 indicates low and position 2 indicates high.

## IMPORTANT SAFETY INSTRUCTIONS

- The hair dryer should be always at position 0 before connecting and disconnecting from the power outlet.
- The electric supply must come from a proper wired power outlet.
- The dryer should use a separate power point from other equipment.
- Always make sure the voltage corresponds with the voltage stated on the rating label on the unit.
- Do not leave the hair dryer running without paying attention.
- Always unplug the unit from the outlet after using. Grasp the plug and unplug it from the outlet when unplugging. Do not pull the plug with unnecessary force.
- If the cord is damage, do not attempt to repair by your own. Send it to the manufacturer, service agent or any other qualified persons in order to avoid any hazard.
- Never attempt to disassemble the dryer on your own.
- Do not drop the hair dryer or subjecting it to any other excessive shock.
- Do not use the dryer near gas or other inflammable materials such as benzene, paint thinner and spray.
- Hair may sucked into air inlet during use, Do not insert any foreign object into the air inlet or outlet. It may cause electric shock.
- If the air inlet or outlet is blocked during use, the thermal switch will function and the heater will turn off. Once the blockage is remove, the heater will automatic switch on.
- When operating the hair dryer, be careful of the nozzle as it is hot.
- Do not blow directly towards the eye or any other sensitive areas.
- Close supervision is required when the appliance is operate by children or infirm person.
- Do not use the hair dryer for purposes other than drying or styling human hair.
- This appliance is only for household and indoor use.

- Do not use any other equipment with this dryer other than those that is supplied by the company.
- This appliance is not suitable for children, people with reduce physical, lack of experience or knowledge unless they are given supervision or instruction on the use of the appliance by a person responsible for their safety.
- Children should be supervised to make sure that they do not play with the appliance.
- If using the appliance in the toilet, unplug the hairdryer after use as it is dangerous where it is in the proximity of water.



### Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.