

# MILUX<sup>®</sup>

Quality • Safety • Reliability

## Instruction Manual

### CLASSY MINI RICE COOKER


#### MODEL:MRC-703




## **GENERAL SAFETY PRECAUTIONS**

1. Read all instructions carefully before use and keep them for future reference.
2. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. Close supervision is necessary when operating the appliance near children. Ensure the power cord does not hang over the wok surface.
5. Always place the appliance on a flat sturdy surface. When moving the appliance, always be aware not to touch hot surfaces.
6. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
7. Do not immerse the appliance, or electrical parts into water or any other liquids.
8. The use of extra attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
9. Unplug the unit when not in use and whenever you clean or move the unit.
10. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
11. This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

## Parts Identification

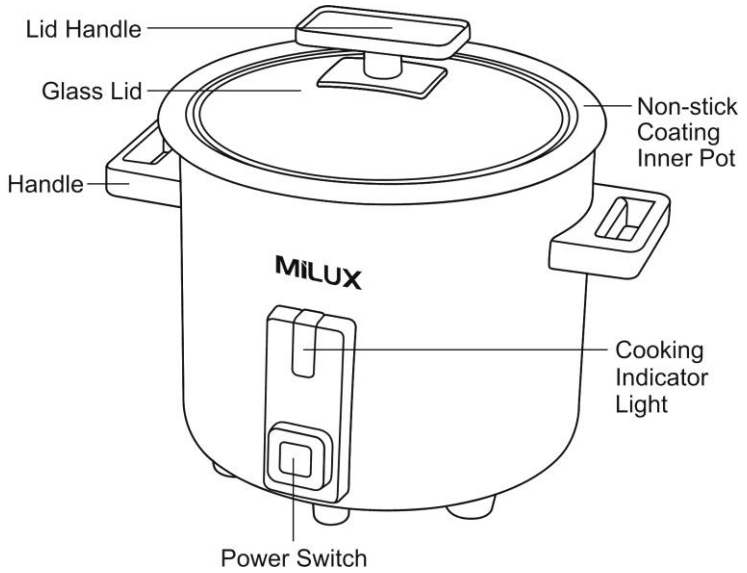

## Accessories

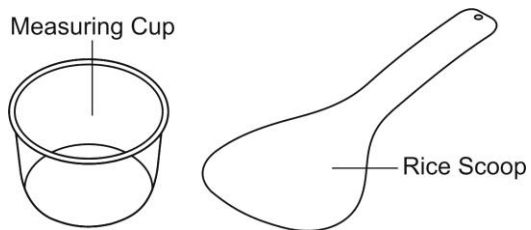

## **Specification**

Model	MRC-703
Rated Voltage	240V~
Rated Wattage	200W
Frequency	50/60Hz
Capacity	0.3-Litre

## **How to Cook Rice**


1. Measure the amount of rice needed with the measuring cup provided. Wash the rice in a separate bowl to avoid damage to inner pot.
2. The maximum capacity for this rice cooker is 1.5 cups of uncooked rice together with 1.5 cup of water.
3. Put the washed rice into the inner pot and add water as required.
4. Be absolutely sure to wipe away any rice grains or water droplets that stick to the outside of the inner pot.
5. Switch on the main power supply. Then press down the power switch to start the cooking .The cooking indicator light will light up.

6. When the rice is cooked, the power switch will pop up and the cooking indicator light will be switched off. Switching off at the power point and unplug from electrical outlet.

## Cleaning and Maintenance

Before commencing cleaning, ensure that the Mains electrical supply is switched OFF. Wait until the appliance is at room temperature before commencing to clean it.

- Never immerse the appliance into water, or allow moisture to contact with it.
- When it is necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the appliance.
- The inner pot, rice scoop and lid may be cleaned with soapy lukewarm water and wipe with dry cloth until it is clean.
- Remove any foreign matters that are trapped on the heater or centre thermostat with fine sandpaper and wipe off with damp cloth.

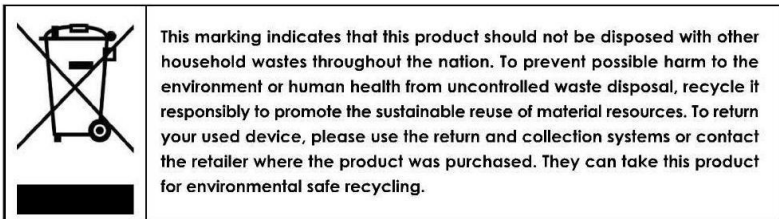



**MILUX SALES & SERVICE SDN. BHD.**

(302263-X)

No. 31, Lorong Jala 14/KS10,  
Off Jalan Telok Gong,  
42000 Port Klang, Selangor, Malaysia.

Tel: 03-3134 1254 Fax: 03-3134 1193

Toll Free: 1800-88-MILUX (64589)

E-mail: [customercare@milux.com.my](mailto:customercare@milux.com.my)

Website: [www.milux.com.my](http://www.milux.com.my)