


# MILUX<sup>®</sup>

Quality • Safety • Reliability


## Instruction Manual CLASSY RICE COOKER MODEL:MRC-718

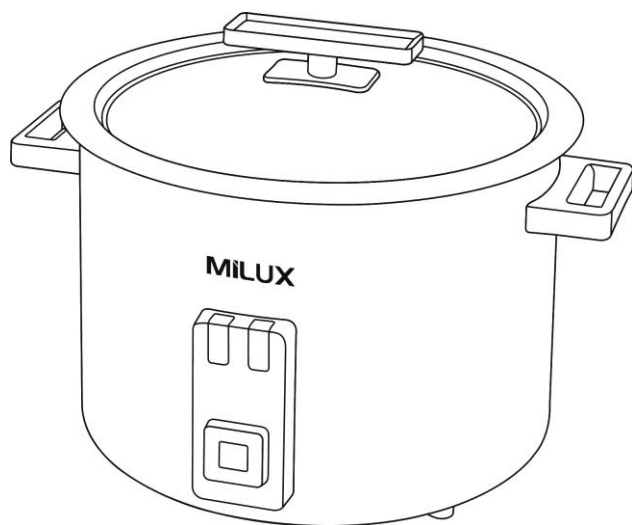


## **GENERAL SAFETY PRECAUTIONS**

1. Read all instructions carefully before use and keep them for future reference.
2. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. Close supervision is necessary when operating the appliance near children. Ensure the power cord does not hang over the wok surface.
5. Always place the appliance on a flat sturdy surface. When moving the appliance, always be aware not to touch hot surfaces.
6. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
7. Do not immerse the appliance, or electrical parts into water or any other liquids.
8. The use of extra attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
9. Unplug the unit when not in use and whenever you clean or move the unit.
10. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
11. This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

## **Parts Identification**

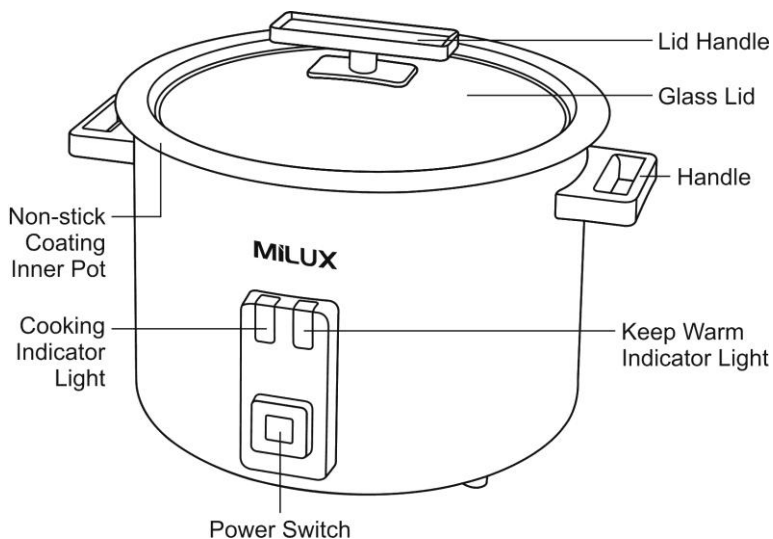

## **Accessories**

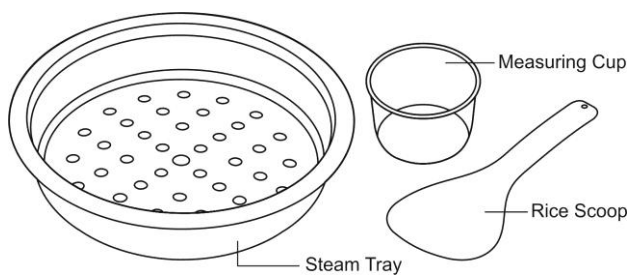

## **Specifications**

|               |           |
|---------------|-----------|
| Model         | MRC-718   |
| Rated Voltage | 240V~     |
| Rated Wattage | 700W      |
| Frequency     | 50/60Hz   |
| Capacity      | 1.8-Litre |

## **How to Cook Rice**

1. Measure the amount of rice needed with the measuring cup provided. Wash the rice in a separate bowl to avoid damage to inner pot.
2. The maximum capacity for this rice cooker is 10 cups of uncooked rice together with 10 cups of water.
3. Put the washed rice into the inner pot and add water as required.
4. Be absolutely sure to wipe away any rice grains or water droplets that stick to the outside of the inner pot.
5. Switch on the main power supply. The keep warm indicator light will light up. Then press down the power switch to start the cooking. Meantime the keep warm indicator light will switch off and the cooking indicator light

will light up. (You must press down the power switch otherwise the rice cooker will be in keep warm function only).

6. When the rice is cooked, the power switch will pop up and the “KEEP WARM” indicator light will be on. The Rice Cooker will be automatically switched over to the “KEEP WARM” function.
7. For best results, it is recommended that the Keep Warm function be allowed to continue for about 15 minutes before opening the lid or starting to scoop out the rice.

## **How to Steam Food**


1. Place the inner pot in the rice cooker and fill with some water. The minimum amount of water recommended is at least two cups of water.
2. Place the steamer tray on the inner pot such that it sits level on the top of the inner pot.
3. Place food and close the top cover. Switch on the main power supply. The keep warm indicator light will light up. Then press down the power switch to start the steaming. You must press down the power switch otherwise the rice cooker will be in keep warm function only.
4. It is necessary to monitor the steaming time to suite your steaming requirement for the food.

5. More water may be added to prolong the steaming function but the maximum level is the base of the steamer tray when position on the inner pot. Do not steam until there are no more water in the inner pot as this may damage the inner pot.
6. When the steaming is completed, lift the power switch gently up and switch off the mains power supply. Be mindful when opening the top cover as the steam that will be discharged is very HOT.

## **Cleaning and Maintenance**

Before commencing cleaning, ensure that the Mains electrical supply is switched OFF. Wait until the appliance is at room temperature before commencing to clean it.

- Never immerse the appliance into water, or allow moisture to contact with it.
- When it is necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the appliance.
- The inner pot, rice scoop and lid may be cleaned with soapy lukewarm water and wipe with dry cloth until it is clean.
- Remove any foreign matters that are trapped on the heater or centre thermostat with fine sandpaper and wipe off with damp cloth.

|   |   |
|---|---|
|  | <p>This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> |
|---|---|



**MILUX SALES & SERVICE SDN. BHD.**

(302263-X)

No. 31, Lorong Jala 14/KS10,  
Off Jalan Telok Gong,  
42000 Port Klang, Selangor, Malaysia.

Tel: 03-3134 1254 Fax: 03-3134 1193

Toll Free: 1800-88-MILUX (64589)

E-mail: [customercare@milux.com.my](mailto:customercare@milux.com.my)

Website: [www.milux.com.my](http://www.milux.com.my)