

MILUX[®]

QUALITY • SAFETY • RELIABILITY

MILUX
CERAMIC SLOW COOKER
MODEL:
MSC-15/MSC-35/MSC-55




GENERAL SAFETY PRECAUTIONS

- Read all instructions carefully before use and keep them for future reference.
- Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
- This appliance is suitable for normal household use only and not for commercial use.
- Use the appliance only on a level working surface.
- Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
- The use of extra attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
- Unplug the unit when not in use and whenever you clean or move the unit.
- To disconnect the appliance, grip power plug and pull from power outlet. Never yank on power cord.
- Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
- If the power supply cord is damaged, have it replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

SPECIFICATION

Model	MSC-15	MSC-35	MSC-55
Rated voltage	220-240V~	220-240V~	220-240V~
Rated Wattage	120W	200W	280W
Frequency	50/60Hz	50/60Hz	50/60Hz
Capacity	1.5L	3.5L	5.5L

PARTS IDENTIFICATION

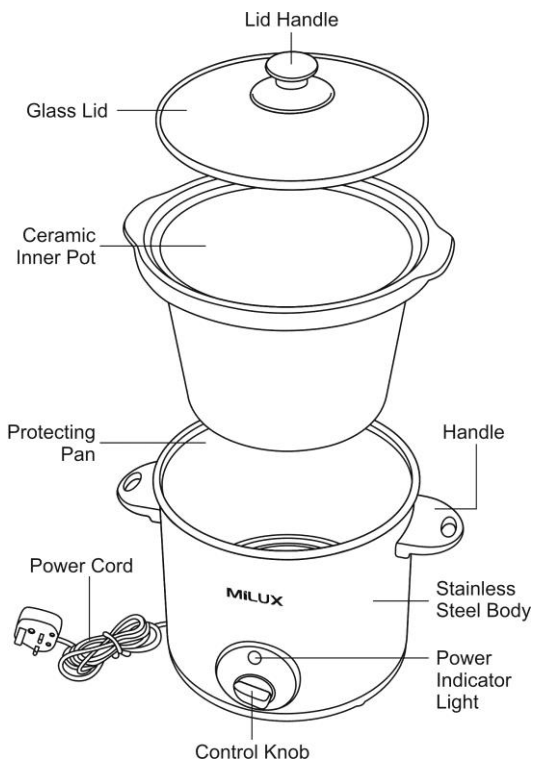

HOW TO OPERATE YOUR SLOW COOKER

Cooking Soup and Porridge:

1. Put food into the ceramic inner pot. For soup, the food & water should not exceed 80% of the pot. For porridge, the rice & water should not exceed 60% of the pot.
2. Wipe dry the surface of the ceramic inner pot and place the ceramic inner pot into the electric slow cooker.
3. Turn on the power supply.
4. Select your desired function LOW-HIGH-AUTO by turning the control knob.
5. To keep warm the food, turn the control knob to “LOW”.
6. When cooking is completed, turn the control knob to “OFF”, followed by turning off the power supply.

Take Note:

1. During initial use, you may notice slight smoke and/or an odour. This is normal and should quickly disappear. It will not recur after the slow cooker has been used for a few times.
2. When using “AUTO” function to slow cook, the slow cooker will heat the food to a certain temperature with high power heating, then turn to low power heating automatically. Electricity can be saved in this process. Kindly note that the control knob does not physically move from “AUTO” function during the cooking cycle.

CLEANING AND MAINTENANCE

1. Before cleaning, ensure that the slow cooker is not connected to the power supply, with plug removed from wall power socket.
2. Allow the slow cooker to cool down before cleaning.
3. Wash the ceramic inner pot and glass lid with warm soapy water or with dishwasher. Rinse and dry thoroughly.
4. The housing, base and interior base of the slow cooker can be wiped with a slightly soft damp cloth. Never use any chemical or abrasive solution to clean the slow cooker.
5. To avoid electric shock and malfunction, never immerse the slow cooker in water or other liquid.
6. Before storage, please ensure that all parts of the slow cookers are completely dried. Do not store the slow cooker in damp areas such as under the kitchen washing basin.

Care for Your Ceramic Inner Pot

1. As in all ceramic cookware, never subject the ceramic inner pot to sudden temperature change.
2. Never heat the ceramic inner pot over an open flame or any other heating sources. The ceramic inner pot is meant for this slow cooker only.
3. Do not put cold/frozen food into the ceramic inner pot when it is hot. Food should be added when the ceramic inner pot is at room temperature.
4. After removing the ceramic inner pot from the slow cooker, do not put it on comparatively lower temperature areas such as refrigerator, freezer, or basin filled with cold water.
5. Never wash the ceramic inner pot right after cooking. Allow it to cool down before washing.



MILUX SALES & SERVICE SDN. BHD.

(302263-X)

No. 31, Lorong Jala 14/KS10,
Off Jalan Telok Gong,
42000 Port Klang, Selangor, Malaysia.

Tel: 03-3134 1254 Fax: 03-3134 1193

Toll Free: 1800-88-MILUX (64589)

E-mail: customercare@milux.com.my

Website: www.milux.com.my